

**HID Readers and Sielox's 32-Bit Controller
(AC-1200, AC-1208, LANLink M1200, and LANLink M1208)**

Wire HID readers to a Sielox 32-Bit Controller just as you would wire them to AC-600s.

Even though there is a blue wire on some HID readers and a port labeled "blue" on Sielox's 32-Bit Controller, the 32-Bit port is designed for sound control with future Sielox readers. It does not correspond to the function that HID intended for the blue wire on their readers. Connecting the HID blue wire to a Sielox 32-Bit Controller will keep the reader from functioning.